

Intelligent Stud Scanner

Model: KC-098

Operation Manual



Intelligent Stud Scanner

Model: KC-098

OVERVIEW

KC-098 Intelligent Stud Scanner can detect joists, AC live wires or metals behind walls through electronic signals. It mainly applies for wires and pipelines distribution on upholstery, installation of electrical equipments (air conditioner and oil smoke extractor) and detection for frame of wood furniture, etc.


KC-098 Intelligent Stud Scanner can be automatically calibrated with sensitive induction after starting up. Select mode for joists, AC live wires or metal detection through the function selection switcher. Once the edges of joists, AC live wires or metals are detected, the scanner will send out acousto-optic indication and you can easily mark the central position of the target on the measured surface through the marker aperture on top of the tool with pencil.

KC-098 Intelligent Stud Scanner has the function of alarm for AC live wires, when it detects the AC live wires out, the live wires caution light at the top of the tool will illumine, meanwhile this will not affect detection for joists or metals, disregard that the function switcher is set in the mode of joists or metals.

Battery safe prompting

- Please remove the battery when clean the product.
- Remove the battery when not in use for an extended period of time.
- Please install the batteries properly as the instructions of the positive and negative charges
- Please dispose the batteries properly. High temperature will cause explosions and do not burn the batteries. Strap insulated tape around the battery charges to avoid unsafe contacts with other objects. Please follow the local regulations of battery disposing.

TOOLS COMPONENTS

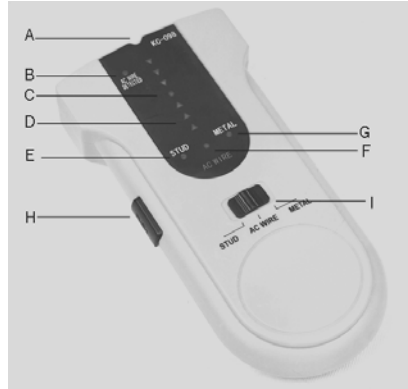

- A. Marker aperture---indicates the edge of the detected object.
- B. Caution light for live wires (red)---the light is on when detecting electric live wires.
- C. Center light (red)--- the light is on when detecting the target object.
- D. Arrow light of both sides (orange)---the two arrow lights move towards the center light when approaching the edge of the detected object.
- E. Joists detecting light (green)---the light indicates that the current detecting mode is on joist.
- F. AC detecting light (green)---the light indicates that the current detecting mode is on AC live wire.
- G. Metal light (green)---the light indicates that the current detecting mode is on metal object.
- H. Power button---the scanner connects to power supply when pressing this button.
- I. Mode switcher---set the mode for joists, AC live wires or metal objects.

OPERATION INSTRUCTIONS

● Battery


Open the battery compartment door on the back of the scanner, and plug one 9 Volt block battery onto the battery connector and put the battery back to the compartment. Close the battery compartment door.

● Calibration

The tool should be calibrated on the surface of the detected object before detecting:

A. Detecting calibration for joists

Set the mode switcher to the mode for joists, and then lightly adhere the scanner to the detected surface, press the power button to connect to the power supply, the scanner will send out acousto-optic indication and be calibrated automatically according to the thickness of the detected wall. The calibration is finished when the sound stops. You can process joists detection now and please always press the power button during the detecting course.

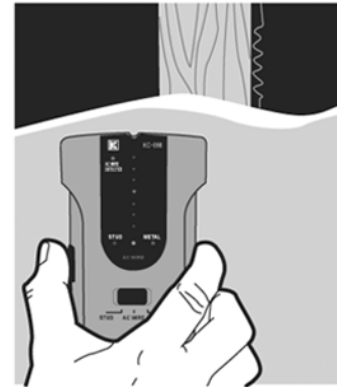

Notice:

1、 when calibrating, the scanner cannot be directly put on the materials with high density (e.g. metals, wood joists), or wet, new-painted and unsuitable places. Restart calibration by changing another place.

2、 When approaching or detecting the AC live wire during calibration, the caution light for live wires will flash after calibration.

B. Detecting calibration for AC live wires

Set the mode switcher to the mode for AC live wire, and then calibrate the tool with reference to the method of “detecting calibration for joists”.

Notice:

When calibrating, the tool will automatically set the degree of induction according to the distance to the live wire. If distance to the AC live wire is far enough, the induction will be set to the strongest degree; if close to the AC live wire, the tool will automatically set to the most ideal induction according to the distance.

C. Detecting calibration for metal objects

Set the mode switcher to the mode for metal object, and then calibrate the tool with reference to the method of “detecting calibration for joists”.

Notice:

1、 when calibrating, the tool will automatically set the degree of induction according to the existence of the metal object. If no metal object exists, the induction will be set to the strongest degree; if metal object exists, the tool will automatically set to the most ideal induction according to the type and size of the metal object.

2、 When approaching or detecting the AC live wire during calibration, the caution light for live wires will flash after calibration.


● Operation

A. Joists detection---detecting joists through walls

According to the calibration requirements for joist detection, calibrate the tool to the ideal induction degree and process as per the following steps:

a. Move the tool across the surface of the object in straight line horizontally and slowly, and hold the tool firmly against the surface.

b. When the tool moves horizontally and is close to the detected object, the outer side of arrow light will illumine and then slow down the moving speed, and the arrow lights of both sides will move towards the center light (if the arrow lights of both sides go out

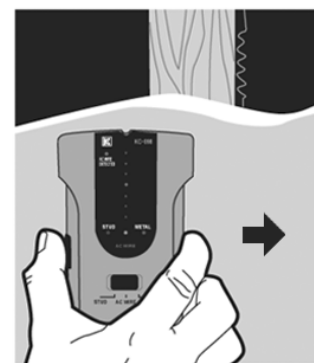

- when moving, reset automatic calibration and detection from another place).
- c. If the edge of joists are detected, the center light will illumine and the beeps will rings, at this time, make a mark on edge of detected object through the marker aperture by pencil.
 - d. Repeat the steps above from the opposite direction to detect the other edge of the target object and make a mark; the center of the two markers is just the center of the detected object. Repeat the operations for several times to get the relatively precise result.

Notice: if the power button released incautiously, you must restart the calibration and repeat the steps above to detect.

- B. AC live wire detection---detecting the AC live wire through walls
 - a. According to the calibration requirements for AC live wire detection, calibrate the tool to the ideal induction.
 - b. Operate the tool and find out the two edges of AC live wires and make a mark with reference to the method of “Joists detection---detecting joists through walls”.
 - c. The center of the two marks is just the center of AC live wire.

Notice: AC live wires in metal pipes or metal covered wire, as well as metal walls or walls of high density all cannot be detected.

- C. Metal object detection---detecting the metal stud through walls
 - a. According to the calibration requirements for metal stud detection, calibrate the tool to the ideal induction.
 - b. Operate the tool and find out the two edges of metal studs and make a mark with reference to the method of “Wood stud detection---detecting wood joists through walls”.
 - c. The center of the two marks is just the center of metal stud.

TIPS ON OPERATION

● Using new battery

Check the battery before operation: please replace the battery when abnormal calibration or no response occurs on the scanner.

● Recommendation

In order to make sure that the scanner is on the best state during detection, hold the tail of the tool when operation and keep the other hand at least 6 inches away from the tool during detection.

● Tips

- A. The tool can accurately detect the center of the target object, but the width of the target object can only be detected in a range.
- B. Please do not use the tool near strong electric wave.
- C. Please do not use the scanner in high temperature and wet place.
- D. Please try to avoid using the tool on wet plate and wall.
- E. Sometimes, the scanner cannot detect the slate or mixed plate correctly because the density of the materials change a lot.
- F. When tacking, cutting or drilling on the wall, ceiling or floor, please take care to the wires and pipes on the back of them.
- G. The covered wires, useless wires, telephone lines, CATV wires and circuitries without electricity could not be detected as live wires.
- H. When the thickness of detected wall is over 3/4 inches or the joists are close to each other, joists detection is not suitable, generally, the space between joists is 16 or 24 inches, and the width of the joist is 1 to 1/2 inches.
- I. The detection is not suitable for metal wall or the metal materials in the wall distribute too thick.
- J. When constructing beside the AC live wires, the power supply should be switched off.

Cautions

- Operate with care and do not let the tool drop down.
- Do not disassemble the tool in case of damage.
- Do not place the tool with the corrosive gas or other corrosive materials.
- Avoid rain and water.
- Do not exposed the the tool to vibration and high or low temperature environment.
- Storage the tool indoor.
- Do not put the tool in the water ,avoid to damage the tool.
- Remove the battery when not in use for an extended period of time in case of damage of tool by deterioration of battery.

TECHNICAL SPECIFICATIONS

Name	Intelligent Stud Scanner	
Type	KC-098	
Object of detection	Joists, AC live wires and Metals	
Detection capability	Joists	Thickness of wall is 19mm(3/4 inches).
	AC live wires	50mm(2 inches) deep away from the wall
	Metals	38mm(1 1/2 inches)deep away from the wall
Power supply	A 9 volt block battery	
Operation current	<50mA	
Operation temperature	+5°C ~+40°C	
Operation humidity	30%~70%	
Storage environment	-20°C ~+60°C ,≤85% (battery not included)	
Dimensions	165mm×80mm×30mm	
Weight	About 150g (battery not included)	

- **Tips**
- Thank you for purchasing our products.
- We hope you to understand that the tool is not a all-purpose tool that can detect all the materials in the wall.
- Please read the instruction manual before operation.
- Keep the tool appropriately after use.

WARRANTY

Within one year from the date of purchase, if any quality problem or non-artificial damage, provide warranty service by the relevant documents.

Notice: The warranty does not apply to the following conditions:

- Disassembling the laser tool will void the warranty.
- Any damage resulting from, but not limited to wear, water, being dropped or repairs attempted by others.

Tips :Most part of the product can be recycled, if you need to deal with this product, please according to local laws and regulations to deal with it, instead of throw it into the dustbin.